



RESTING TUBE

DESCRIPTION

The FH SCANDINOX resting tube is mandatory for consistency and high product performance for packed products, especially table, cake and puff pastry margarine.

The resting phase is important to your production cycle because this is where final crystallisation of the product occurs. Without a proper final crystallisation, the performance with crystal structure and product texture unfortunately can be complicated. We have the perfect solution in the resting phase as the FH SCANDINOX resting tube gives the product sufficient time to form and settle for high quality product performance. We manufacture equipment of high quality materials so that our customers' achieve better and more consistent results in processing. Our resting tube is equipped with a heating jacket to prevent the product from sticking. The individual sections are flanged together as one assembly, allowing mounting of internal sieving mechanism for uniform consistency. All these attributes help to ensure a constant steady flow rate necessary for a superior end product.

The FH SCANDINOX resting tube is fully compatible with a range of different packing machine brands, e.g., Benhil and Bock & Sohn.

PRODUCT APPLICATIONS

- Table margarine
- Puff pastry


Two different types of resting tubes are available in our range: one for table margarine and one for puff pastry margarine. Both options are suitable for brick, plate or block wrapping.

MATERIALS

All product contacting parts are made of stainless steel AISI 316L

OPTIONAL ACCESSORIES

- Stainless steel mobile frame
- Hot water tempering unit
- Automatic return valve
- CIP valve system
- Connection flange to the packing machine

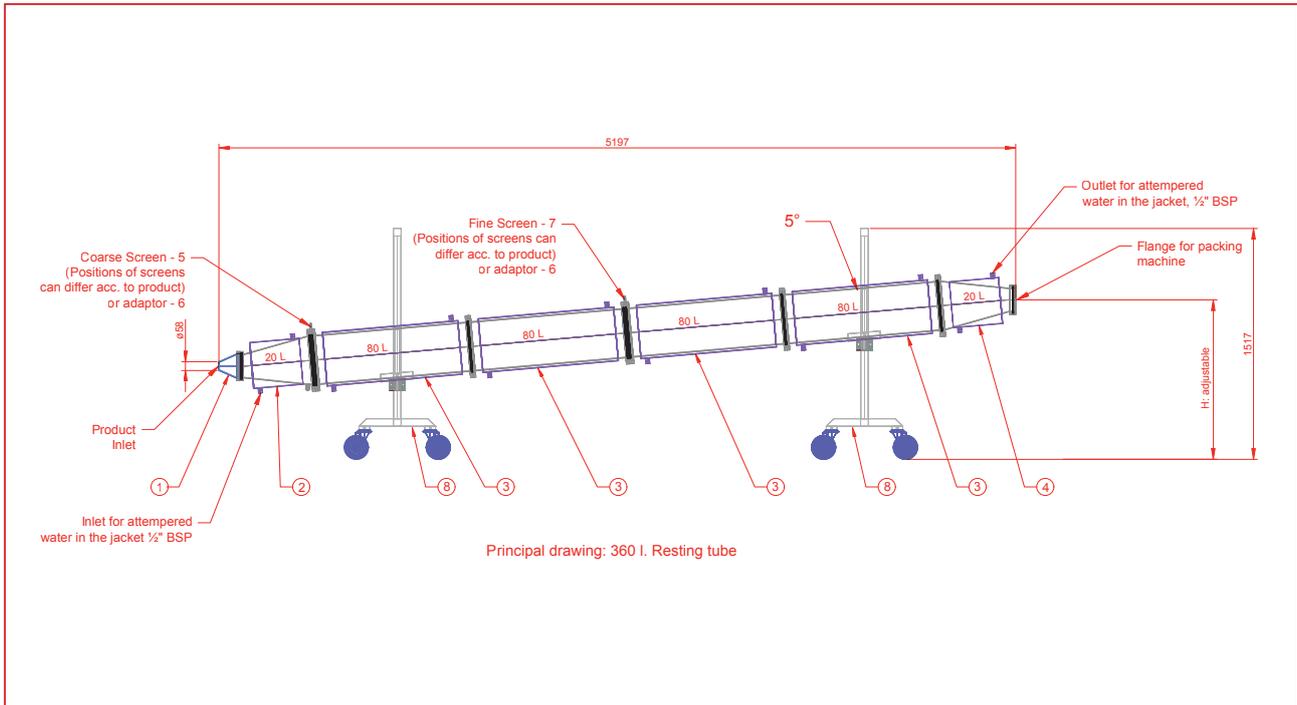

FHS RESTING TUBE	Volume/section	Size (Dia. mm*)	Volume of inlet (L)	Volume of outlet (L)	Outlet flange (Dia. rmm)
Table margarine	20	150	0,5	0,5	150
Table margarine	30	150	0,5	0,5	150
Table margarine	50	150	0,5	0,5	150
Table margarine	50	200	4	4	200
Puff pastry and industrial margarine	80	300	20	20	300/150
Puff pastry and industrial margarine	160	450	86	185/20	450/300/150

*The choice of diameter depends on the capacity of the margarine line
 The FH SCANDINOX resting tube is delivered with strainers, standard inlet cone and is mounted on a stainless steel frame